


Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar
Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Piese de schimb - Запасные части - 备件

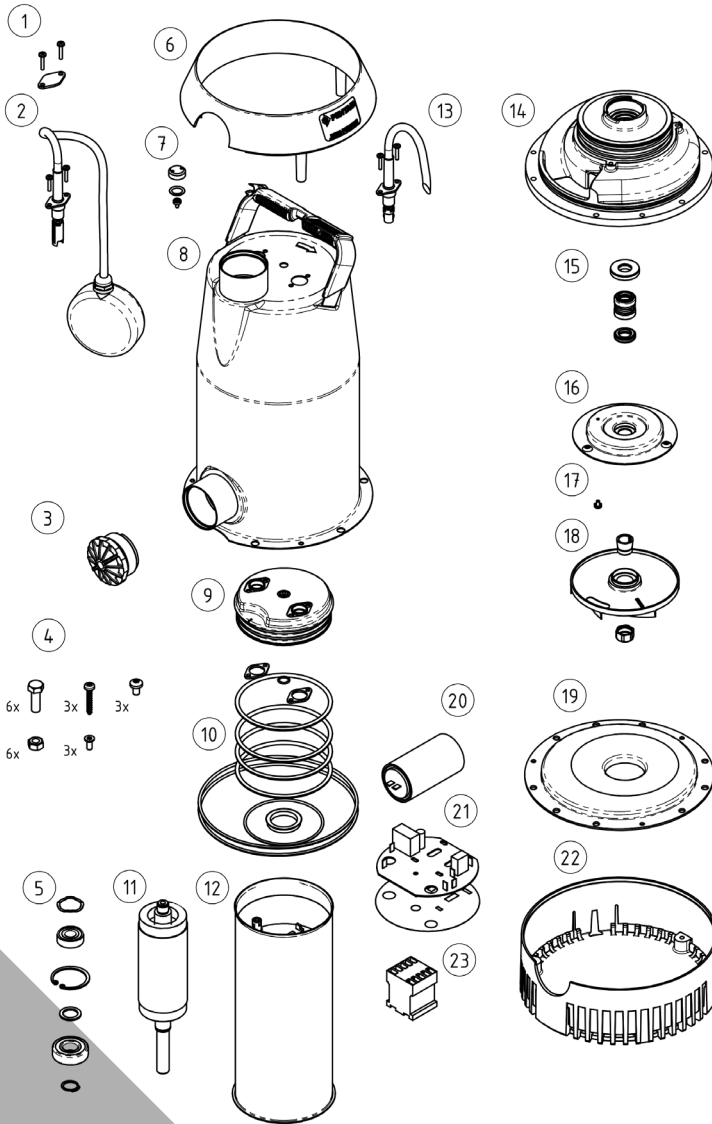

①	Blindflansch	Blind flange	JP48921
②	KT-Schalter	KT-switch	JP48881
③	Stopfen	Plug	JP48887
④	Schraubensatz	Screw set	JP48899
⑤	Lagersatz	Bearing set	JP48893
⑥	Abdeckung	Cover	JP48900
⑦	Verschluss	Plug	JP48882
⑧	Doppelmantel	Double jacket	
	UV 620-625		JP48885
	UV 635		JP48886
⑨	Deckel	Plug	
	1 Loch	1 hole	JP48891
	2 Loch	2 hole	JP48892
⑩	Dichtungssatz	Seal set	JP48898
⑪	Rotorwelle	Rotor shaft	
	UV 620-625		JP48894
	UV 635		JP48895
⑫	Stator + Gehäuse	Stator + Housing	
	620-1		JP48890
	620-3, 625-3		JP48888
	635-3		JP48889
⑬	Leitung	Cable	
	230 V, 620-1		JP48883
	400 V, 6xx-3		JP48884
⑭	Lagerflansch	Bearing flange	JP48901
⑮	Gleitringsdicht.satz	Mech. seal set	JP48902
⑯	Dichtungsdeckel	Seal cover	JP48903
⑰	Ölschraube	Oil screw	JP48904
⑱	Lauftrad	Impeller	
	UV 620		JP48905
	UV 625		JP48906
	UV 635		JP48907
⑲	Ringgehäusedeckel	Volute casing cover	JP48908
⑳	Kondensator	Capacitor	JP48879
㉑	Platine	PCB	
	UV 620-1		JP48897
	UV 620-1S		JP50263
	UV 6xx-3		JP48896
㉒	Siebfuß	Strainer base	JP48914
㉓	Schalterschütz	Contacteur	JP48880
--	Motorschutzstecker 230V	Motor protection plug 230V	JP50290